



MKIII ALARM WIRE GUIDE


Deluxe | ITEM | WIRE COLOR | POL | WIRE LOCATION |
LA-9324

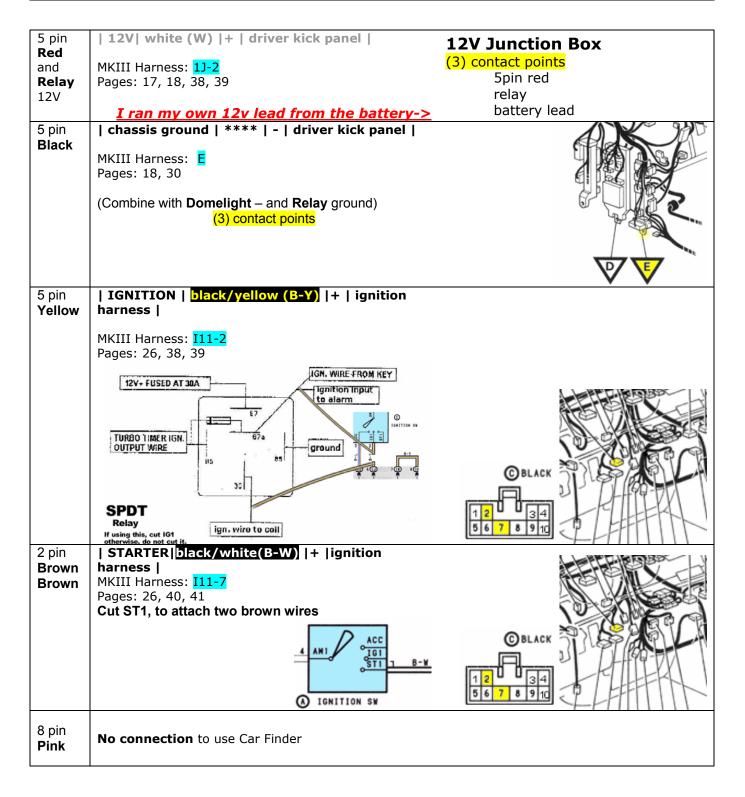

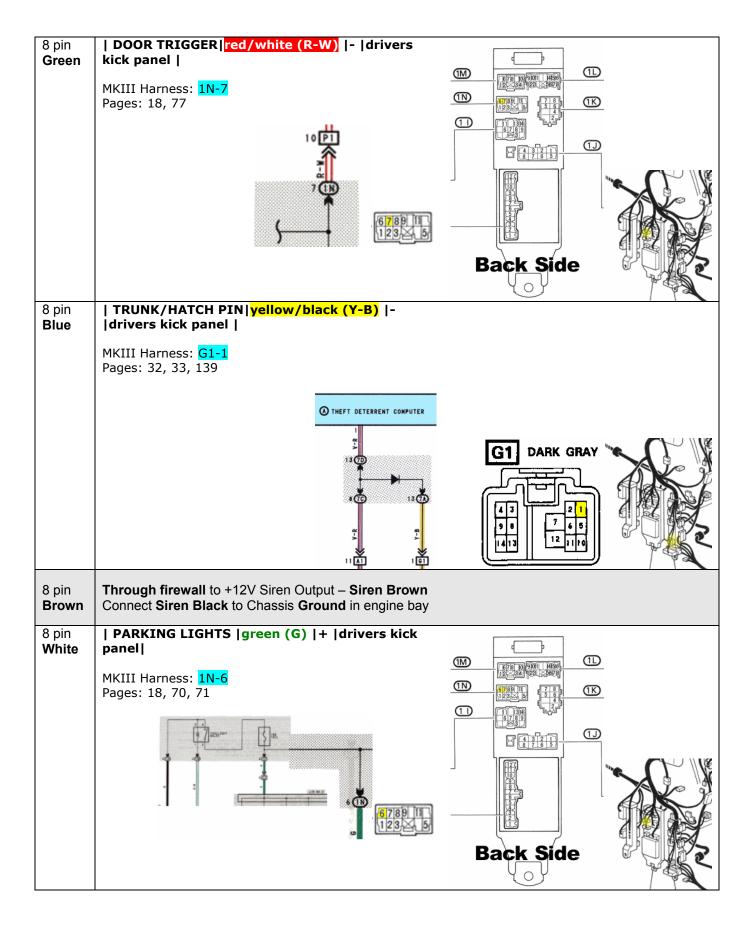

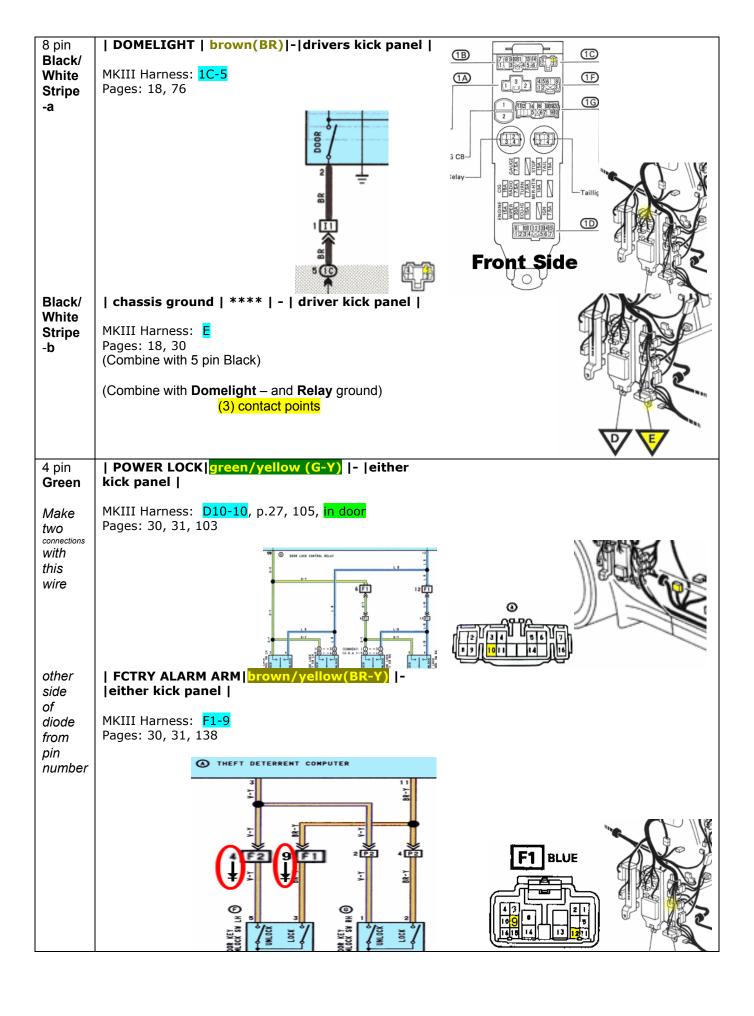

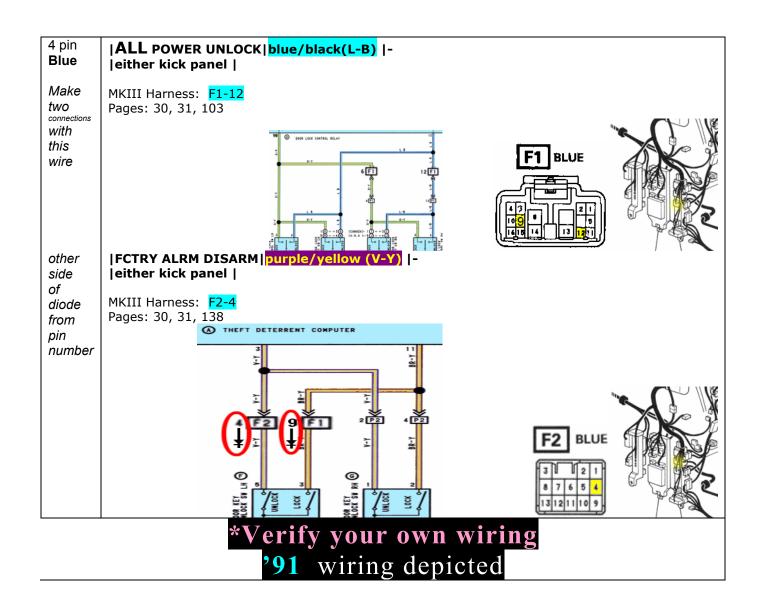

 

Deluxe LA-9324	2 pin Harness – Starter/EFI Disable 5 pin Harness – Main 8 pin Harness – Auxiliary 4 pin Harness – Door lock
	·
Unused	5 pin Harness – Main
	Grey – Trunk Release
	Orange – Starter Disable non-Deluxe model
	8 pin Harness – Auxiliary
	Violet – Positive Door Switch Trigger
	4 pin Harness – Door lock
	Red – +12V for Aftermarket Actuators
	Pink – No Driver only unlock

```
| 12V|white - white/red |+ |ignition harness |
 STARTER|black/white |+ |ignition harness |
 IGNITION|black/yellow |+ |ignition harness |
 SECOND IGNITION|black/orange |+ |ignition harness |
 ACCESSORY|pink/blue |+ |ignition harness |
 POWER LOCK|green/yellow |- |either kick panel |
 POWER UNLOCK|blue/black |- |either kick panel |
 PARKING LIGHTS | green | + | drivers kick panel |
 PARKING LIGHTS |pink |- |steering column |
 HEADLIGHTS|pur/wht and grn/red |- |steering column |
| DOOR TRIGGER|red/white |- |drivers kick panel |
| TRUNK/HATCH PIN|yellow/black |- |drivers kick panel |
 HOOD PINItied with trunk | | |
 FCTRY ALARM ARM|brown/yellow |- |either kick panel |
 FCTRY ALRM DISARM|purple/yellow |- |either kick panel |
 TACHOMETER|black | |check connector *1 |
 BRAKE WIRE|green/white |+ |drivers kick panel |
| HORN TRIGGER|blue/red |- |steering column |
| WIPERS|blue/red (lo) *2 |+ |steering column |
| LF WINDOW UP/DN|red - grn/yel |A |in drivers door |
| RF WINDOW UP/DN|blu/blk - blu/yel |A |in drivers door or dkp |
| DOMELIGHT | brown | - | drivers kick panel |
```

Notes: *1 The check connector is located in the front of the left shock tower. It is a small rectangular plastic box, either black, gray, or green, and it is marked diagnostic on the lid. *2 The high position is red/blue(+) in the same location.